

ANLAN

 
USER MANUAL

ELECTRIC HAIR CLIPPER

ANLAN

Electric Hair Clipper

User Manual

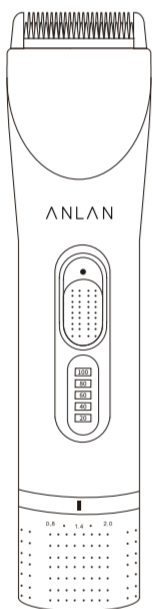

Thank you for purchasing ANLAN Electric Hair Clipper. Before using the product, please read this instruction manual to ensure correct use.



Safety Precautions

- Please read this "safety precautions" carefully before use to ensure correct use.
- The precautions given here are for the correct and safe use of the product to prevent injury to the user or property damage. Please observe.


	<p>It is a content that may cause death or serious injury.</p> <ul style="list-style-type: none"> Unplug the power cord from the outlet when the unit will not be used for a long time. There is a risk of fire or electric shock. when unplugging the power plug from the socket, hold the power adapter and unplug it. If the power plug is damaged, it may cause fire, electric shock or short circuit. Do not place the product in the bathroom or in a humid place. Damage to the insulator material can cause a fire, electric shock, or short circuit. Do not immerse the product in water. There is a risk of electric shock or short circuit. Do not use with wet hands. There is a risk of electric shock or short circuit. Except maintenance technicians, please do not disassemble or repair the product. There is a risk of fire, electric shock or injury.
	<p>There may be a possibility of personal injury.</p> <ul style="list-style-type: none"> Before use, make sure that the blade is not deformed or damaged. Risk of injury or accident. Do not use except for beauty and beauty services. It may cause an accident or failure. Do not press the blade strongly around the scalp or ears or on the soft part of the skin. There is a risk of injury or accident. Do not use when the attachment or main unit is damaged or deformed, or the internal structure is exposed. There is a risk of injury or accident. Do not attach perm solution or hair spray to the body or blade. It may cause discoloration, deformation or corrosion.

- Do not drop the device or hit other objects. It may cause fire, electric shock or injury.
- Do not use when foreign objects enter the product. There is a risk of electric shock, fire and injury.

  Product Introduce

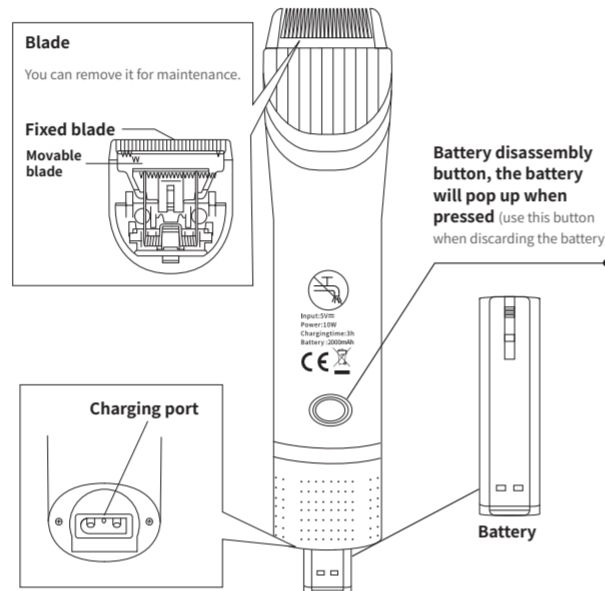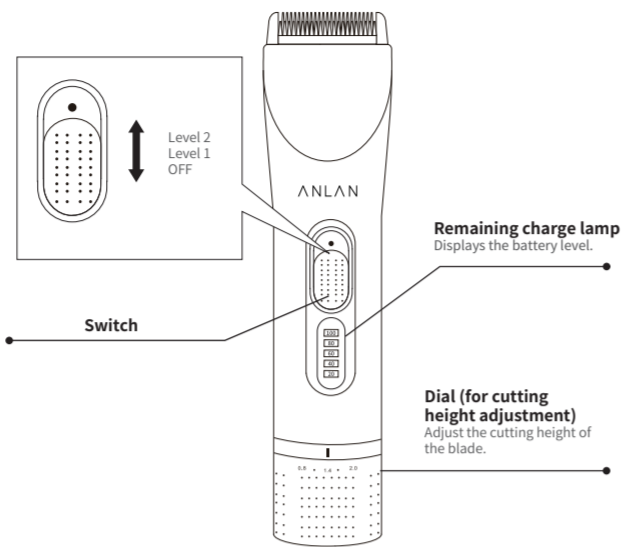

Product components

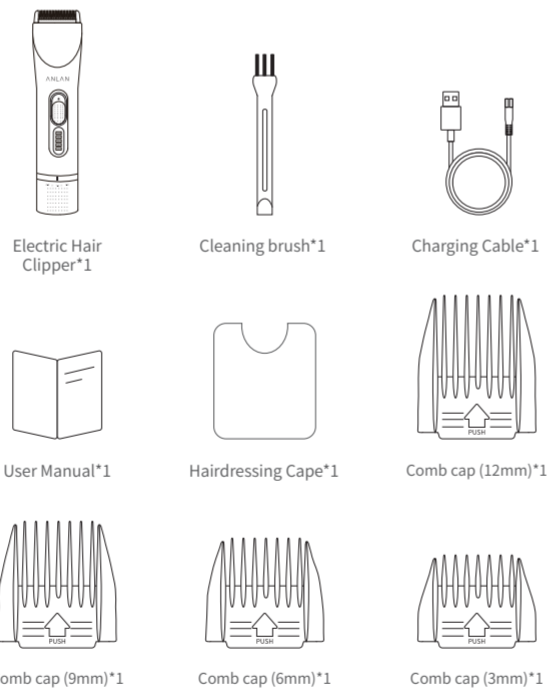 


Specifications

Name	Electric Hair Clipper
Model	DTJ02
Material	ABS
Charging method	USB
Input	5V=1A
Power	10W
Battery Capacity	2000mAh
Charging Time	Appr. 3 hours
Continuous use time	about 4 hours
Power cable length	About 1.0m
Size	180 x 45 x 40mm
Weight	Appr. 230g


Charging Method

- Make sure that the switch is "OFF".
- Firmly insert the charging cable into the main unit socket.
- Plug the power adapter into an outlet.

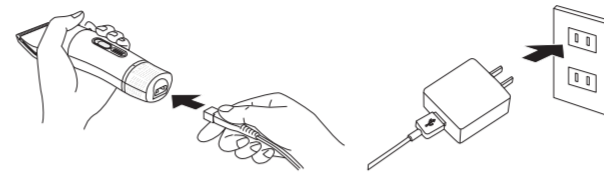

- Confirm that the charging lamp has gone out. It will be fully charged in about 3 hours. You can use it for about 4 hours with one charge. (it depends on how often and how you use it.)

Full charge ← → Low power

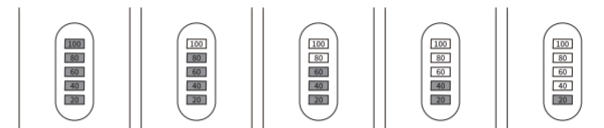


For long battery life

- Do not leave the switch on for a long time. Battery life will be shortened.
- When storing, be sure to fully charge before storing. Even if you do not use the product for a long time, recharge it once every six months.

How to use

- Make sure that the switch is "OFF".
- Select the cutting height.
 - 3 to 12 mm: Attach the attachment.
 - 0.8 to 2.0 mm (without attachment): Turn the dial to select the blade height. Align the convex part of the dial with the display of the cutting height to be used.
- Set the switch to "ON" for use. When using the AC type, connect the power adapter.
- After use, turn off the switch.

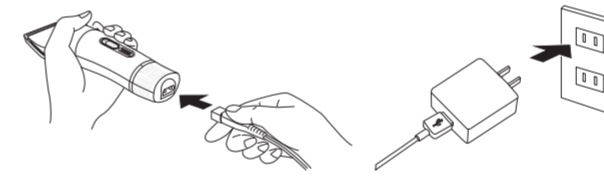


- Maintenance: attach the blade to the main body and store in a place with low humidity.

How to attach / remove the blade

※ Confirm that the switch is "OFF" and disconnect the power adapter.

How to remove the blade

- Set the dial to 2.0.
- Push the blade outward.

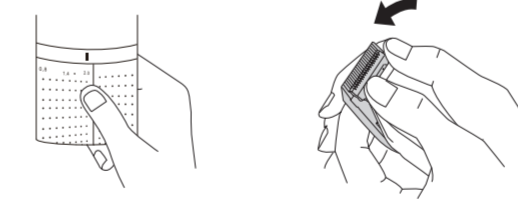


- Use force to remove the blade.




How to install the blade

- Insert the blade hook into the recess of the main body.
- Make sure it matches the main unit.

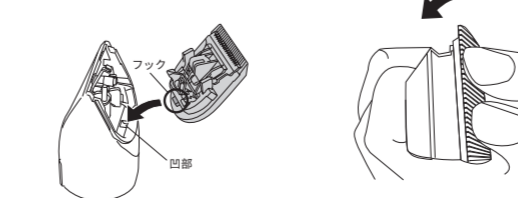

- Push it in until it clicks.

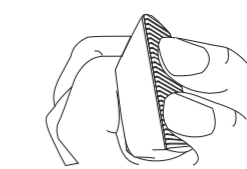


Install / Remove attachments

※ Confirm that the switch is "OFF" and disconnect the power adapter.

Install attachments


- Set the dial to "0.8mm".
- As shown in the illustration, attach the attachment to the blade and slide it all the way in.

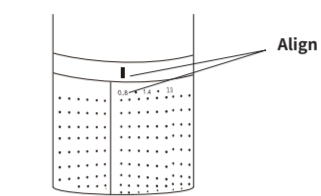

※ Please slide it firmly until the attachment stops.
※ Please keep the dial at 0.8mm.

Remove attachments

- Remove it by pushing it up with your thumb as shown.

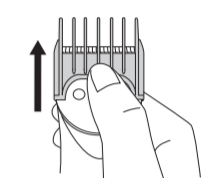

How to care

※ Turn off the switch and disconnect the power adapter before cleaning.

Wiping cleaning (main unit / each attachment)


- Wipe off the dirt with a soft, dry cloth.
- If stains do not come off easily, squeeze a soft cloth soaked in "soap water" or "neutral detergent diluted with water" well.

Brush cleaning (body / blade)

- Remove the blade from the body.
- Remove the hair debris with the attached cleaning brush.



- Lubricate the blade and attach it to the body. Please add oil drop by drop in the arrow part of the picture.

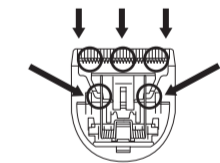

Attention

- Never wash with water.
- Do not use alcohol, aniline, etc.

Guarantee

First of all, we hope you never need this warranty. But we also want to offer you the best service, especially if the product has problems. Our goal is to offer our customers the best products with first class quality and service. We guarantee return and modification within 30 days, and technical support at any time. If you are not satisfied or have any questions about the ANLAN product, please do not hesitate to contact us.
service@anlan.co
thank you,
ANLAN customer service