


# KIPOZI

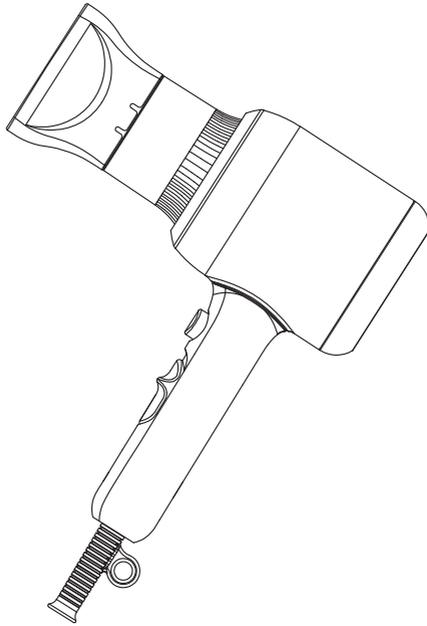

PROFESSIONAL  
NANO IONIC HAIR DRYER

**QL-5917DC**

## **USER MANUAL**

## Instruction Manual (EN)

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:  
**READ ALL INSTRUCTIONS BEFORE USING**  
**KEEP AWAY FROM WATER**

## **⚠ DANGER**

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

**To reduce the risk of death by electric shock:**

1. Always “unplug it” immediately after using.
2. DO NOT use while bathing.
3. DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
4. DO NOT use near, place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. **DO NOT reach into the water.**
6. DO NOT use an appliance with a twisted, bent or otherwise damaged cord.

## **⚠ WARNING**

**To reduce the risk of burns, electrocution, fire, or injury to persons:**

1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
4. Never use while sleeping.
5. Never drop or insert any object into any opening.
6. DO NOT use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. DO NOT use an extension cord with this appliance.
8. Do not direct hot air toward eyes or other heat-sensitive areas.
9. DO NOT place this appliance directly on any surface while it is hot or plugged in.


10. Attachments (when furnished) may be hot during use. Allow them to cool before handling.
11. DO NOT operate with voltage converter.
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
13. While using the appliance, keep your hair away from air inlets.

## **OPERATING INSTRUCTIONS**

1. This appliance is intended for household use. Use on Alternating Current (50/60 hertz). Standard Dryers are designed to operate at 220 to 240 volts A.C.
2. Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
3. When using this appliance near water (e.g, bathrooms), the use of an electric outlet protected by a Ground Fault Circuit Interrupter is recommended.
4. When not in use, “unplug it.” Allow the the appliance to cool and store out of children in a safe, dry location.
5. Do not wrap the cord around the appliance. Check the cord regularly for any sign damage.
6. To prolong the life of the dryer, keep filters clean of hair and dust.

## **SAVE THESE INSTRUCTIONS**

# PRODUCT DESCRIPTION

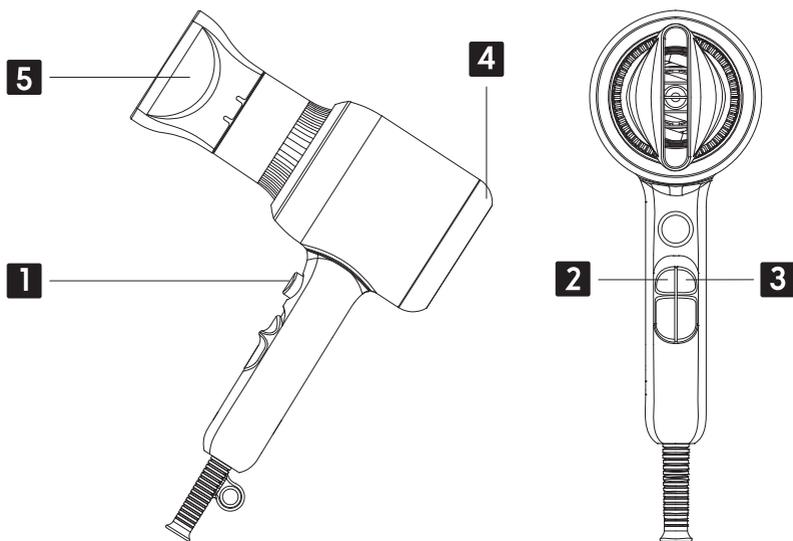

**1** Cool Shot Button

**2** Temperature Switch


**3** Power/Air Speed Switch

**4** Removable Filter

**5** Concentrator

Temperature Switch

- ☺☺☺
- - High
- - Medium
- ❄ - Low

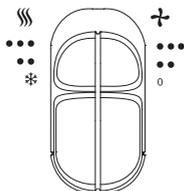

Power/Air Speed Switch

- ✦
- - Fast airflow
- - Soft airflow
- 0 - Turn off

# SETTING SELECTION

speed/temp	hair type
Soft/Low	delicate, thin, or easy-to-style hair
Soft/Medium	average-to-thick or treated hair
Fast/High	thick, coarse or hard-to-style hair
Cool shot	sets style in place for all hair types

## CONCENTRATOR

Place the nozzle onto the root of the hair to concentrate the airflow. Then at a moderate speed slide down to the ends of hair to straighten or dry the hair.

## COOL BLAST

Lock in the style and supercharges, the drying process, by delivering a high-speed cool stream of hair.

## REMOVABLE FILTER

Press at a downward angle slightly to open the filter. Any dust or debris that accumulates in the filter can be easily wiped out and this extends the lifespan of the hair dryer.

VOLTAGE: **220-240V**

POWER: **1800-2200W**

FREQUENCY: **50/60Hz**

CORD LENGTH: **2.5M**

AIR SPEED: **SOFT/FAST**

ITEM WEIGHT: **684G**

TEMPERATURE: **LOW/MEDIUM/HIGH**

## PRODUCT FEATURE

Ceramic Technology while generating Nano Ions that help create silky, smooth, and healthy hair without frizz.

## HOW TO DRY

1. Gently towel dry hair to remove excess water.
2. Set dryer on highest setting and speed. With head forward, flip hair over and dry the under layers first.
3. When hair is almost dry, lower heat and speed setting and begin to style hair as desired.

- **For straight, smooth hair:**

Turn off the dryer, attach concentrator, put the nozzle onto the root of the hair, then slide down dryer smooth and straighten hair until dry. Repeat with all sections of hair until it is completely dried.

4. Once you've achieved the desired style, click and hold down the cool blast button to lock the style look with a burst of cool air.

## HAIR CARE TIPS

1. Keep the dryer about 10 cm away from your head to avoid burning the scalp or damaging hair.
2. To help prevent heat damage and add shine, spritz damp hair with a heat protection spray before blow drying.
3. DO NOT concentrate airflow on any area for an extended period of time.

## CLEANING AND MAINTENANCE

The air filter should be cleaned regularly, since a dirty or clogged filter will impair the efficiency of the dryer.

1. To clean air filter, make sure the dryer is turned off and unplugged.
2. Pinch the air filter on the sides and pull outwards to remove.
3. Use a soft bristle brush to gently remove any particles that are lodged in filter.
4. If the unit is dirty, wipe it with a damp cloth.
5. To replace the air filter after cleaning, align correctly and push back into place.

## STORAGE

When not in use, unplug the unit. Use the practical hanging ring, wait for the appliance to cool, and store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance, as this will cause the cord to wear prematurely and break. Handle cord carefully, and avoid jerking, twisting, or straining it, especially at plug connections.

# LIMITED ONE YEAR WARRANTY

Our hair dryer comes with a one-year warranty, please feel free to contact us if you have any questions, we will do our best to serve you and offer you a satisfying solution.

## IF YOUR PRODUCT FAILURE TO OPERATE, CONTACTUS VIA EMAIL “SUPPORT@KIPOZI.COM”.

Thank you for purchasing the professional QL-5917DC hair dryer, KIPOZI will glad to have your satisfaction with the hair dryer. Please share your using experience on the product page if you love it.

If you have any problems with this product do not hesitate to contact us via going to [www.amazon.com](http://www.amazon.com) > Your Account > Your orders > Find your order and click “contact seller” or contact us via the email [support@kipozi.com](mailto:support@kipozi.com), we will glad to help you!

ANY QUESTION PLEASE CONTACT US AT:

 KIPOZIBEAUTY

 [WWW.KIPOZI.COM](http://WWW.KIPOZI.COM)

 [SUPPORT@KIPOZI.COM](mailto:SUPPORT@KIPOZI.COM)



PRINTED ON RECYCLED PAPER.