

PROFESSIONAL 1 INCH CERAMIC HAIR STRAIGHTENER

KP-6608

USER MANUAL

Instruction Manual (EN)

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCKS OR PERSONAL INJURY, PLEASE FULLY READ THE INSTRUCTIONS BEFORE USING.



KEEP AWAY FROM THE CHILDREN.



This KIPOZI hair straighteners should not be used by children without appropriate parental supervision. This product is not a toy and should be used with extreme caution.

⚠ **DANGER:** The heating plates of this straightener are hot for effective styling.

- 1. Never let your skin or eyes touch the hot plates.
- 2. Do not place any hot part of this unit on any heat sensitive surface (rug, quilt) when hot or plugged in.
- 3. Always unplug this appliance immediately after use.
- 4. Wait for this straightener to cool down before storing it away.


⚠ WARNING: Keep away from any and all liquids.

- 1. DO NOT use while bathing.
- 2. DO NOT use/place near places where the item may be dropped into water or other liquids.
- 3. If the appliance falls into water, "unplug it" immediately. DO NOT reach into the water to retrieve it.

⚠ CAUTION: To reduce the risk of electrocution.

- 1. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water, return the appliance to a service center for examination and repair.
- 2. This straightener is intended for household use. Only use with 100-240V, 50/60Hz power supply.
- 3. Keep the cord away from heated surfaces while using.

PRODUCT DESCRIPTION

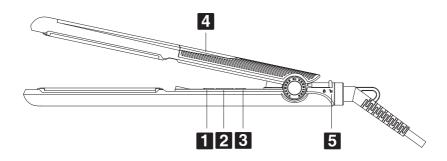

- 1 Power Switch 2 Temperature Control Button
- 3 Quick Heating Button (TURBO) 4 LED Screen
- 5 LOCK/UNLOCK Button

OPERATION:

- 1. Unlock the plates by pressing the releas on the lock/unlock button on the end of the hair straightener (push the Lock/Unlock Button in the opposite direction to lock it).
- 2. Plug the straightener into the power outlet, the hair straightener will enter into the standby mode, the screen display will read "OFF". Press and hold the power button for a few seconds to turn the straightener on.
- 3. The default temperature is 270°F when the machine is turned on. Press the "+" or "-" (to increase and decrease the temperature respectively) button to set the temperature. The temperature ranges from 230°F-450°F. During the heating process. The selected temperature value will be flashed on the LED screen, and it stops flashing when it reaches the set temperature.

Multiple Temperature Setting for all hair types: 230/270/300/330/360/390/420/450°F

4. No matter what level the current temperature is set on, when the "a" button is pressed, the temperature will automatically be set to 450°F which is the highest level. When the "a" button is pressed, the "a" symbol on the LED screen will be illuminated, and when the hair straightener reaches 450°F, the "a" symbol will no longer be illuminated. 5. When the product is in active use, in order to shut it down, press and hold the power button for a few seconds to turn the straightener off. The

product will enter standby mode and the LED screen display will read "OFF". Please be cautious and allow the product to cool before further handling or putting the product away.

6. To reduce the risk of injury always unplug the appliance immediately after use.

Voltage: 100-240V Plate width: 4.3*1 inch

Frequency: 50/60Hz Body length: 11.5 inch

Power Output: 52W Cord Length: 8 ft

Plate Type: Ceramic coated plates Temperature Settings: 230°F-450°F

Automatic shutdown function: Automatically shuts off after 60 min

STYLER TIPS:

- 1. Comb and dry your hair, and then apply heat protectant.
- 2. Make sure to select the appropriate temperature for your hair type.
- 3. Starting at the top of the head, next to the scalp, grab a small section of hair and clamp it between the plates.
- 4. Maintaining some tension, slowly slide the straightneer down the section of hair from roots to tips.
- 5. In order to make the styling effect more durable, it is recommended to use hair spray after styling.
- 6. The amount of time depends on the thickness and hairstyle of your hair. The thicker the hair, the longer time it will take.

MAINTENANCE A STORAGE

- 1. Be sure that the appliance is turned off, unplugged, and has cooled off.
- 2. DO NOT put any stress on the cord where it enters the handle, as it could cause the cord to fray and possibly break.
- 3. Store in the original packaging or in a clean, dry place. DO NOT hang the Straightener up by the cord.

△ CLEANING

It is important to keep the plates clean.

- 1. The Straightener should be cleaned only when it is cold to touch.
- 2. Use a clean, soft, slightly damp cloth to wipe the plates and the outside of the power handle. DO NOT use any object that can scratch the barrel.

IF YOUR PRODUCT STOPS WORKING, PLEASE FOLLOW THE PROCEDURE BELOW

- 1. Switch off the unit
- 2. Unplug the unit from the plug socket and check the socket if it is available.
- 3. Wait for 15 minutes and then plug the unit back into the wall or plug it into another socket.
- 4. Switch the unit back on.

FAQ:

1. The plates may not be in contact completely when they are shut. This is common to most hair straighteners on the market. That's for sure, this will have no negative impact on the straightening of your hair. If you want the plates to be in contact completely, you can press the straightener harder. 2. This hair straightener is compatible with 100-240V, and the plug only works in the EU. You will not need an electrical converter, but you will need a plug adapter that overcomes socket issues when using it abroad. The voltage will switch automatically.

LIMITED ONE YEAR WARANTY

Our KIPOZI Hair Straightener comes with a one-year warranty, please feel free to contact us if you have any questions. The KIPOZI team will do our best to serve you and offer you a satisfying solution.

IF YOUR PRODUCT FAILS TO OPERATE, CONTACT US VIA "SUPPORT@ KIPOZLCOM".

Thank you for purchasing the KIPOZI KP-6608 hair Straightener, we are glad to have you as a customer and we hope you will be more than satisfied with the straightener.

If you have any problem with this product, please do not hesitate to contact us via www.amazon.com > Your Account > Your orders > Find your order and click 'Contact seller', or contact us via (support@ kipozi.com), we will be very glad to help you!

FOR ALL QUESTIONS, PLEASE CONTACT US AT:



WWW.KIPOZI.COM

⋈ SUPPORT@KIPOZI.COM