


ANLAN

Multifunctional Skin Care Machine

User Manual

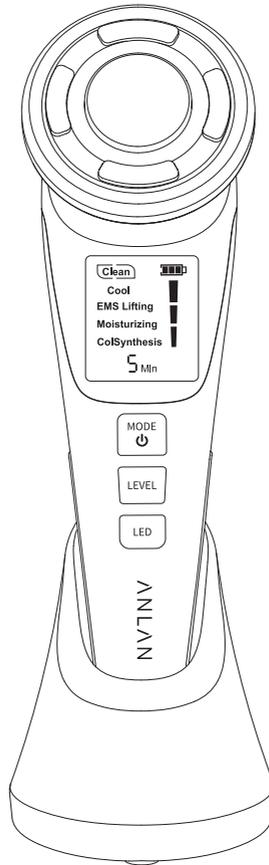

※This product is not a medical device used for diagnosis or treatment, but a general household item.

Thank you for purchasing the ANLAN multifunctional facial massager. Please read this entire manual carefully before using it to ensure proper use and safety. In addition, this manual is also available as a guarantee, please safekeeping.



Safety Precautions

In order to prevent harm and property damage to users, please read this manual carefully and follow the manual step.


 Warning	Inappropriate use can lead to undesirable consequences.
 Attention	Please follow the instructions to use the machine to avoid injury.

 Prohibition	 Warning	
	<ul style="list-style-type: none"> ● Never use this device with following medical electrical equipment. ● Tiny electro-magnetically damaged implant, such as pacemaker. ● Medical electronics for life support such as artificial heart / artificial lung. ● Portable medical electronics, such as device of electrocardiogram. 	
 Mandatory	 Attention	
	<p style="text-align: center;">The people mentioned below should consult a doctor before using the device.</p>	
	<table style="width: 100%; border: none;"> <tr> <td style="vertical-align: top; width: 50%;"> <ul style="list-style-type: none"> ● Women in pregnancy ● Acute (painful) illness ● Patients with facial neuralgia ● Persons with heart problems ● Persons with malignant tumors ● People with abnormal blood pressure ● circulatory disturbances such as diabetes ● Persons suffering from infectious diseases ● Persons with a history of dermatitis like atopic and contact dermatitis ● People with sensory disturbances due to severe peripheral </td> <td style="vertical-align: top; width: 50%;"> <ul style="list-style-type: none"> ● People with allergies ● Patients with tuberculosis ● People with hemophilia ● People with febrile illness </td> </tr> </table>	<ul style="list-style-type: none"> ● Women in pregnancy ● Acute (painful) illness ● Patients with facial neuralgia ● Persons with heart problems ● Persons with malignant tumors ● People with abnormal blood pressure ● circulatory disturbances such as diabetes ● Persons suffering from infectious diseases ● Persons with a history of dermatitis like atopic and contact dermatitis ● People with sensory disturbances due to severe peripheral
<ul style="list-style-type: none"> ● Women in pregnancy ● Acute (painful) illness ● Patients with facial neuralgia ● Persons with heart problems ● Persons with malignant tumors ● People with abnormal blood pressure ● circulatory disturbances such as diabetes ● Persons suffering from infectious diseases ● Persons with a history of dermatitis like atopic and contact dermatitis ● People with sensory disturbances due to severe peripheral 	<ul style="list-style-type: none"> ● People with allergies ● Patients with tuberculosis ● People with hemophilia ● People with febrile illness 	

Product Details

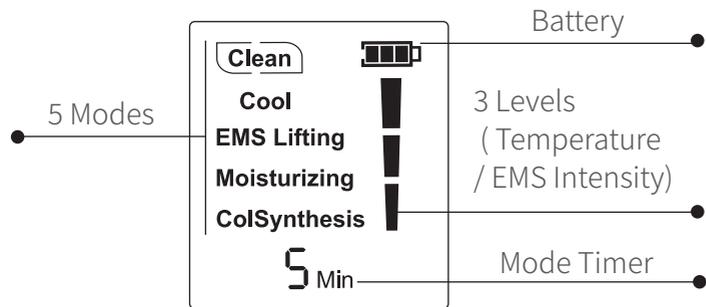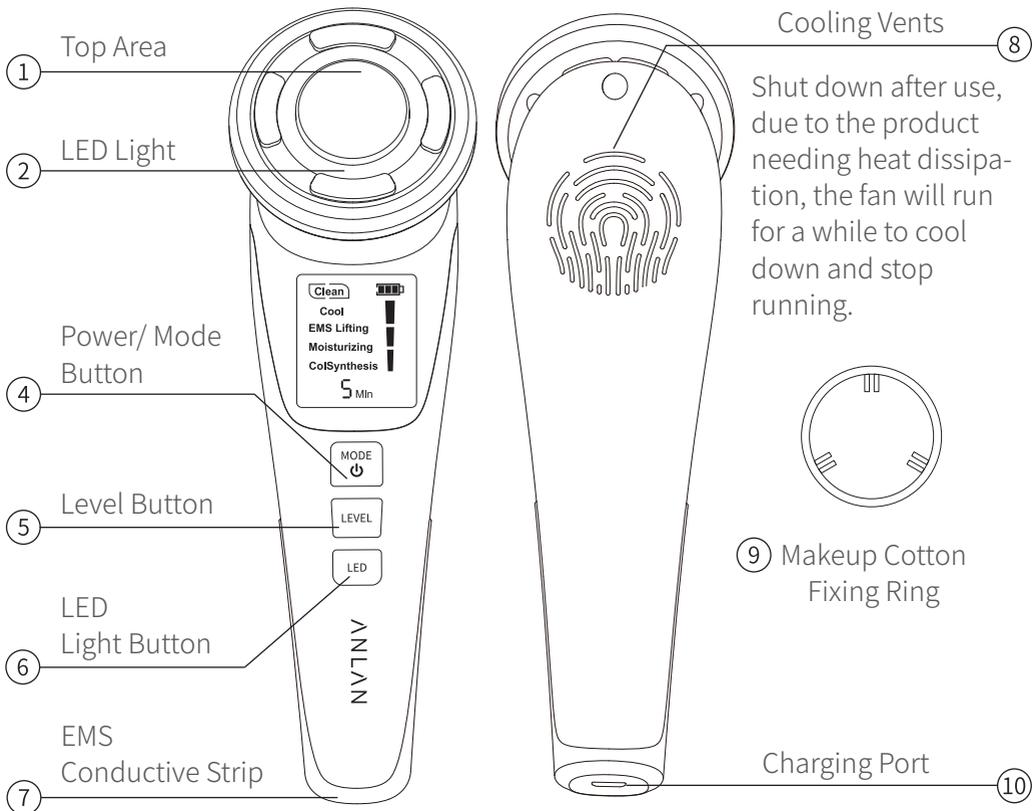

③ Display Screen

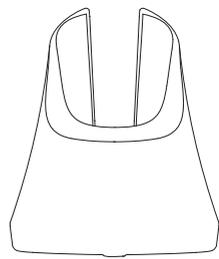

⑪ Base

Specification

Product Name	Multifunctional Skin Care Machine
Model Number	A-DRY11
Device Size	175 * 55 * 67 mm
Base Size	80*65 mm
Product Weight	135g
Material	ABS,stainless steel
Vibration Frequency	10000±10%rpm
Temperature	Hot: 38 °C -40 °C -42 °C, Cold: 12 °C -8 °C -6 °C
Battery	1000mAh
Charging Time	Appr.3 Hours
Accessories	User Manual,Cable, Cotton Ring, Base
Warranty	1 year

Packing List




Skin Care
Machine * 1



Cotton Fix
Ring* 2



USB Cable * 1

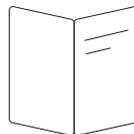

Instruction
Manual * 1

Before Use



For the first use, we recommend you test device on your arm. Try it on the skin with your toner, lotion or milk before long term using.



- ▶ 1. Wash your arm with soap, then wipe with towel.



- ▶ 2. Select "**Moisturizing**" mode and apply your skin care products to test it.



- ▶ 3. If there is no discomfort after 24 hours, you can use the device with reassurance.



Note

- Please remove your makeup and clean your face before using.
- Don't stay in one place for more than 10 seconds.
- Please adjust an proper temperature according to your needs.
- Be sure to touch the metal sensing area when using.
- Don't use on dry skin directly, skin care products are recommended.
- If you feel uncomfortable, stop using it and go to see a doctor.

Modes and Functions

- ※LED light therapy are not on by default, please turn on according to your preference
- ※EMS micro current sensation are different for different people, it's normal if you feel it too strong or too weak, please choose proper levels.
- ※Please hold on the conductive strip of device to feel vibration and EMS.

Mode	Function	Recommend	Use Frequency	Level
Clean	Warm Vibration Ion+ export Red/Blue Light	Makeup Remover	3 Times/Week	Temp:3 Level (Warm:38°C-40°C -42°C)
Cool	Cool Vibration Red/Blue Light	Toner,Lotion Mask,Serum	Everyday	Temp:3 Level (Cool:12°C-8°C-6°C)
EMS Lifting	EMS Red/Blue Light	Toner,Lotion Mask,Serum	Everyday	EMS:3 Level
Moisturizing	Warm Vibration Ion- import Red/Blue Light	Toner,Lotion Mask,Serum	Everyday	Temp:3 Level (Warm:38°C-40°C -42°C) Ion- import :3 Level
Col Synthesis	Cool Vibration Ion- import Red/Blue Light	Toner,Lotion Mask,Serum	Everyday	Temp:3 Level (Cool:12°C-8°C-6°C) Ion- import:3 Level


Using Steps for Cleaning with Device

※Be sure to use water-soluble cosmetics. Please do not use oil type or scrub cream or gel.


※Device is not waterproof, please do not wash it.

※Please don't pour too much makeup remover to avoid overflowing causing machine failure.


※Please wipe to clean metal area everytime after finishing using to avoid leaving any indelible stains.

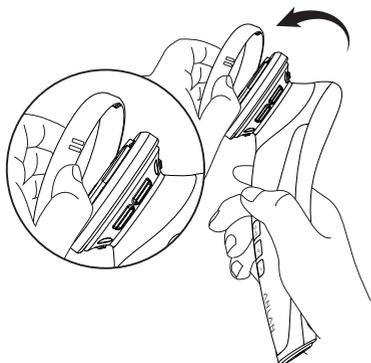

1 Remove cotton pad ring

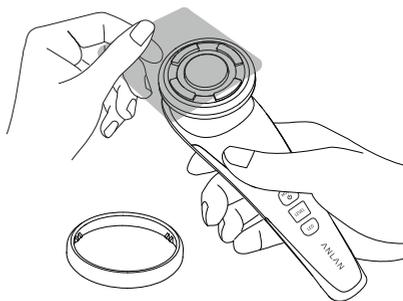

2 Put makeup remover cotton pad on the top

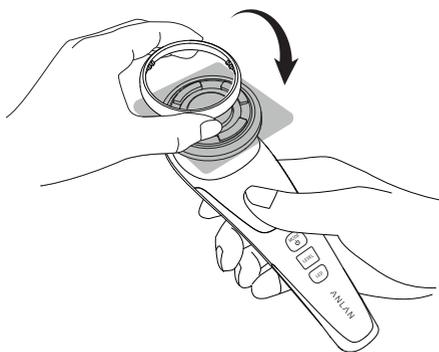

3 Install cotton pad ring



4 Drop makeup remover on the pad

Using Steps for Skin Care with Device


- ※ You don't have to complete each mode in order. Please use it according to your preference.
- ※ Skin care modes are recommended to use about 15 minutes everyday.

- 1 Wash face with facial cleanser and wipe off water
- 2 Apply your mask/ toner/ lotion/serum etc...



- 3

MODE	Choose skin care mode you want (Cool/ EMS Lifting/ Moisturizing/ Col Synthesis)
LEVEL	Choose light therapy you want (red/ blue light therapy)
LED	Choose level you want from level 1 to level 3

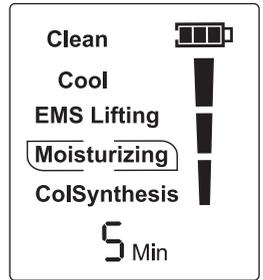

- 4 Slowly move the device to massage face after applying skin care products
- ※ Hold on conductive strip of device. If you don't touch it, you won't feel any vibration.

- ① From nose to forehead
- ② From bottom of forehead to top
- ③ From center of face to the outside
- ④ From chin to cheek



Maintenance

- Turn off the power after use.
- The main body cannot be washed with water.
- Never use thinner or benzine.
- If it is dirty, wipe it off with a towel or tissue.
- Do not put the main body in a fire or overheat.
- Do not leave product in direct sunlight or near heat .
- No one but a repair technician should disassemble, repair or modify.
- Do not leave the product in a humid place such as bathroom.
- Store it out of reach of children and in a safe place.
- Please do follow precautions and warnings above.
- We are not responsible for any injuries, malfunctions, damages caused by your incorrect use, disassembly, modification, repair, etc.

FAQ

Q: It seems that the device was vibrating again after the power was turned off.

A: After use, the device inside are still hot, so even if the power is turned off, the ventilation will continue to work for 30 seconds to cool down machine

Q: The head does not vibrate.

A: ① It is necessary to make an complete electronic circuit of this product to feel vibration. Grasp the conductive strip on side of device and lightly put device top against your skin to create an electronic circuit. (If the head is separated from the skin, it will not vibrate because no electronic circuit can be created.)

② Always keep your skin moisturized with lotion or serum. If skin is too dry, transmission of vibration and EMS will be impaired, which may reduce the effect and cause skin problems.

Q: Do you remove the ring and use it? Do you use it with it attached?

A: Only CLEAN mode needs to be used with cotton and ring.

In modes other than CLEAN mode, you need to remove the cotton ring.

Q: Can I use it on anything other than the face (body, etc.)?

A: Only for the face. Do not use on anything other than the face

Q: Isn't it more effective to press it strongly?

A: You don't have to push hard. Apply lightly so as not to put a strain on your skin.

Q: Can I use it with makeup on?

A: Please do not use with makeup on, wash your face before using.

Q: My hand feels tingling during use, is it okay?

A: Please dry your hands before use. Since it works with a weak current, the current also flows in the hand to form a circuit. But it is a very small electric current, so it has no side effect to health.

Q: What is the estimated usage time? Is it okay to use it every day?

A: Skin care modes can be used everyday. clean modes are suggested to use 3 times/week. We suggest you use it 15-20 minutes a day, but different people have different withstanding capacity, please shorten or extend use time according to actual situation.

Q: I have acne and inflammation on skin, can I use it?

A: As the skin is fragile during inflammation or acne, please avoid sensitive areas.

※ Excessive use can put stress on your skin, so please avoid using all modes every day.

About the Disposal of Multifunctional Facial Massager



This product uses a lithium-ion battery. Lithium-ion batteries are a valuable recyclable resource. When disposing of used products, remove the lithium-ion battery and take it to a cooperating store that has a recycling box or a specific collection window.